

Meters

The meters in the following pages are similar to the ones located in the town. They may not look exactly the same; however, the objective of each is the same. Each meter is explained in the basics. Please call 937-6200 or 937-6220 for more information on your meter.

Sensus Meter

This is the "leak detector". If the dial is spinning it means you are running water or have a leak.

This dial will rotate when water passes through your lines. One full rotation = 1 Cubic Foot of water.


SENSUS

TouchRead[®] System



9 8 7 6 5 4 3 2 1 0

CUBIC FEET
READING 100 CF

The two numbers in black are not used in your meter read; however, when water is used they will eventually rotate and once they reach a certain point the white numbers will start to rotate.


The four numbers in white are what both guns read and is considered your meter read.

3 9:28

R900 Meter

You will need to shine a light on this in order for your read to appear.

This is your meter read. This screen will flash from your meter read to something that says rate. The rate should be all zeros, if it is not you are either currently running water or you have a leak.

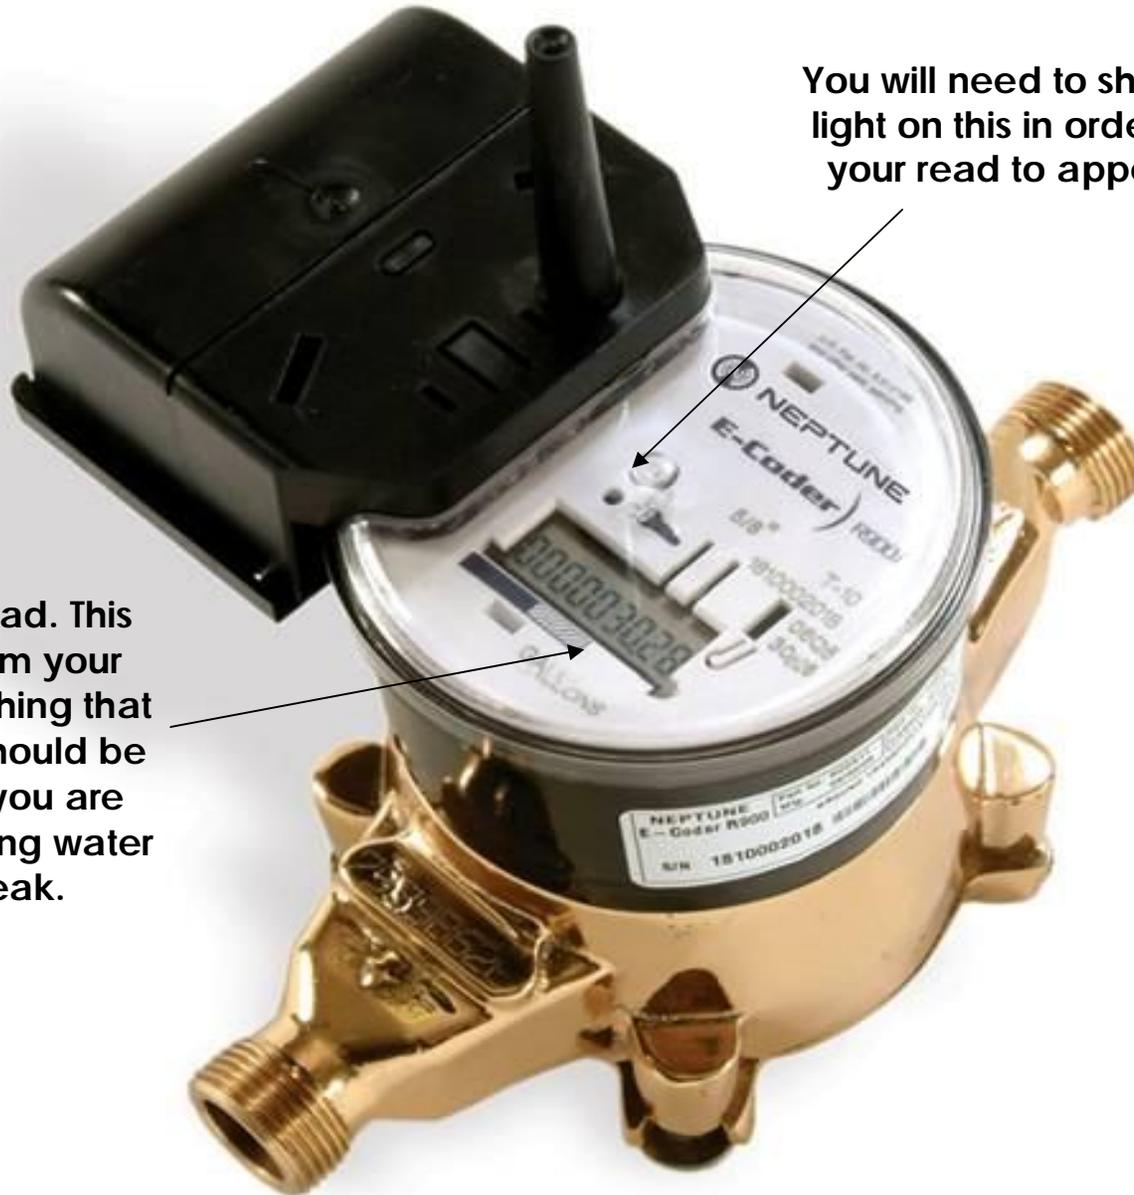


Touchpad (Older Version)

This is the "leak detector". If the dial is spinning it means you are running water or have a leak.


The red spinner will move as well. When it makes a full rotation, it will turn the black number one decimal point.

These four white numbers are your meter read.

The two black numbers are the decimal points. When the black numbers make a full rotation it rotates a white number and so on.

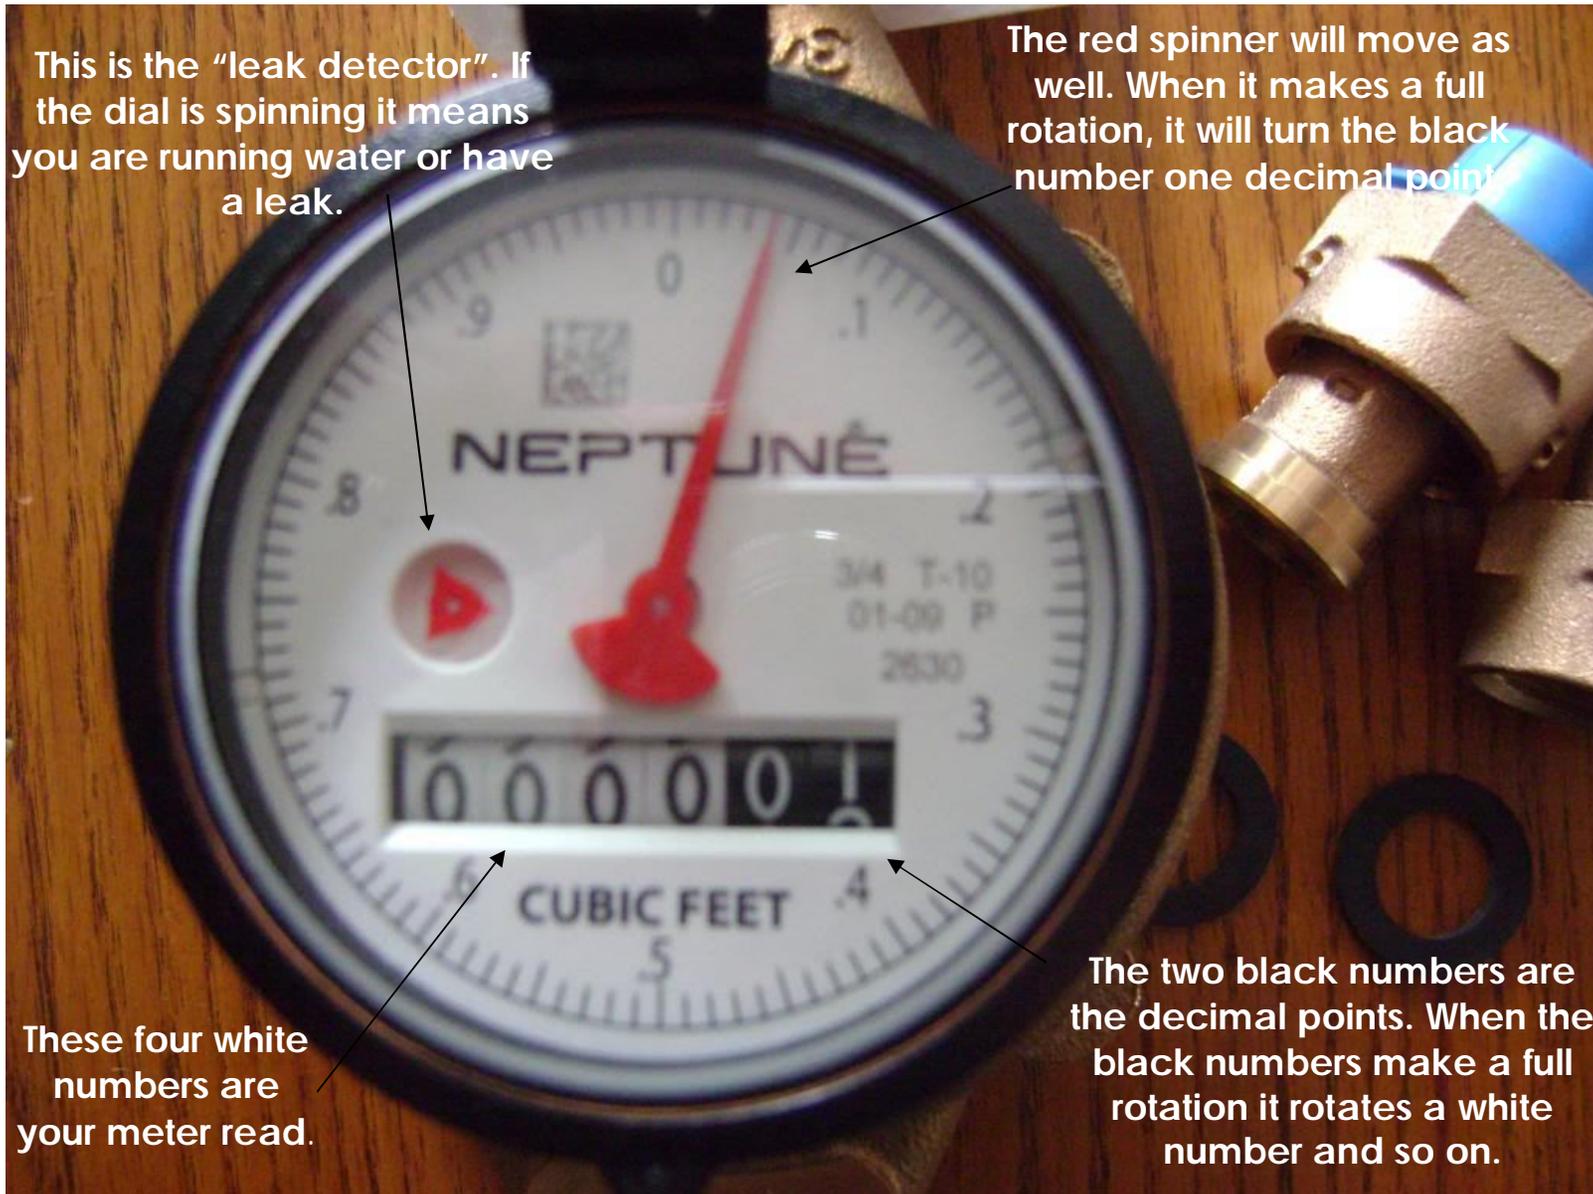

Touchpad Meter

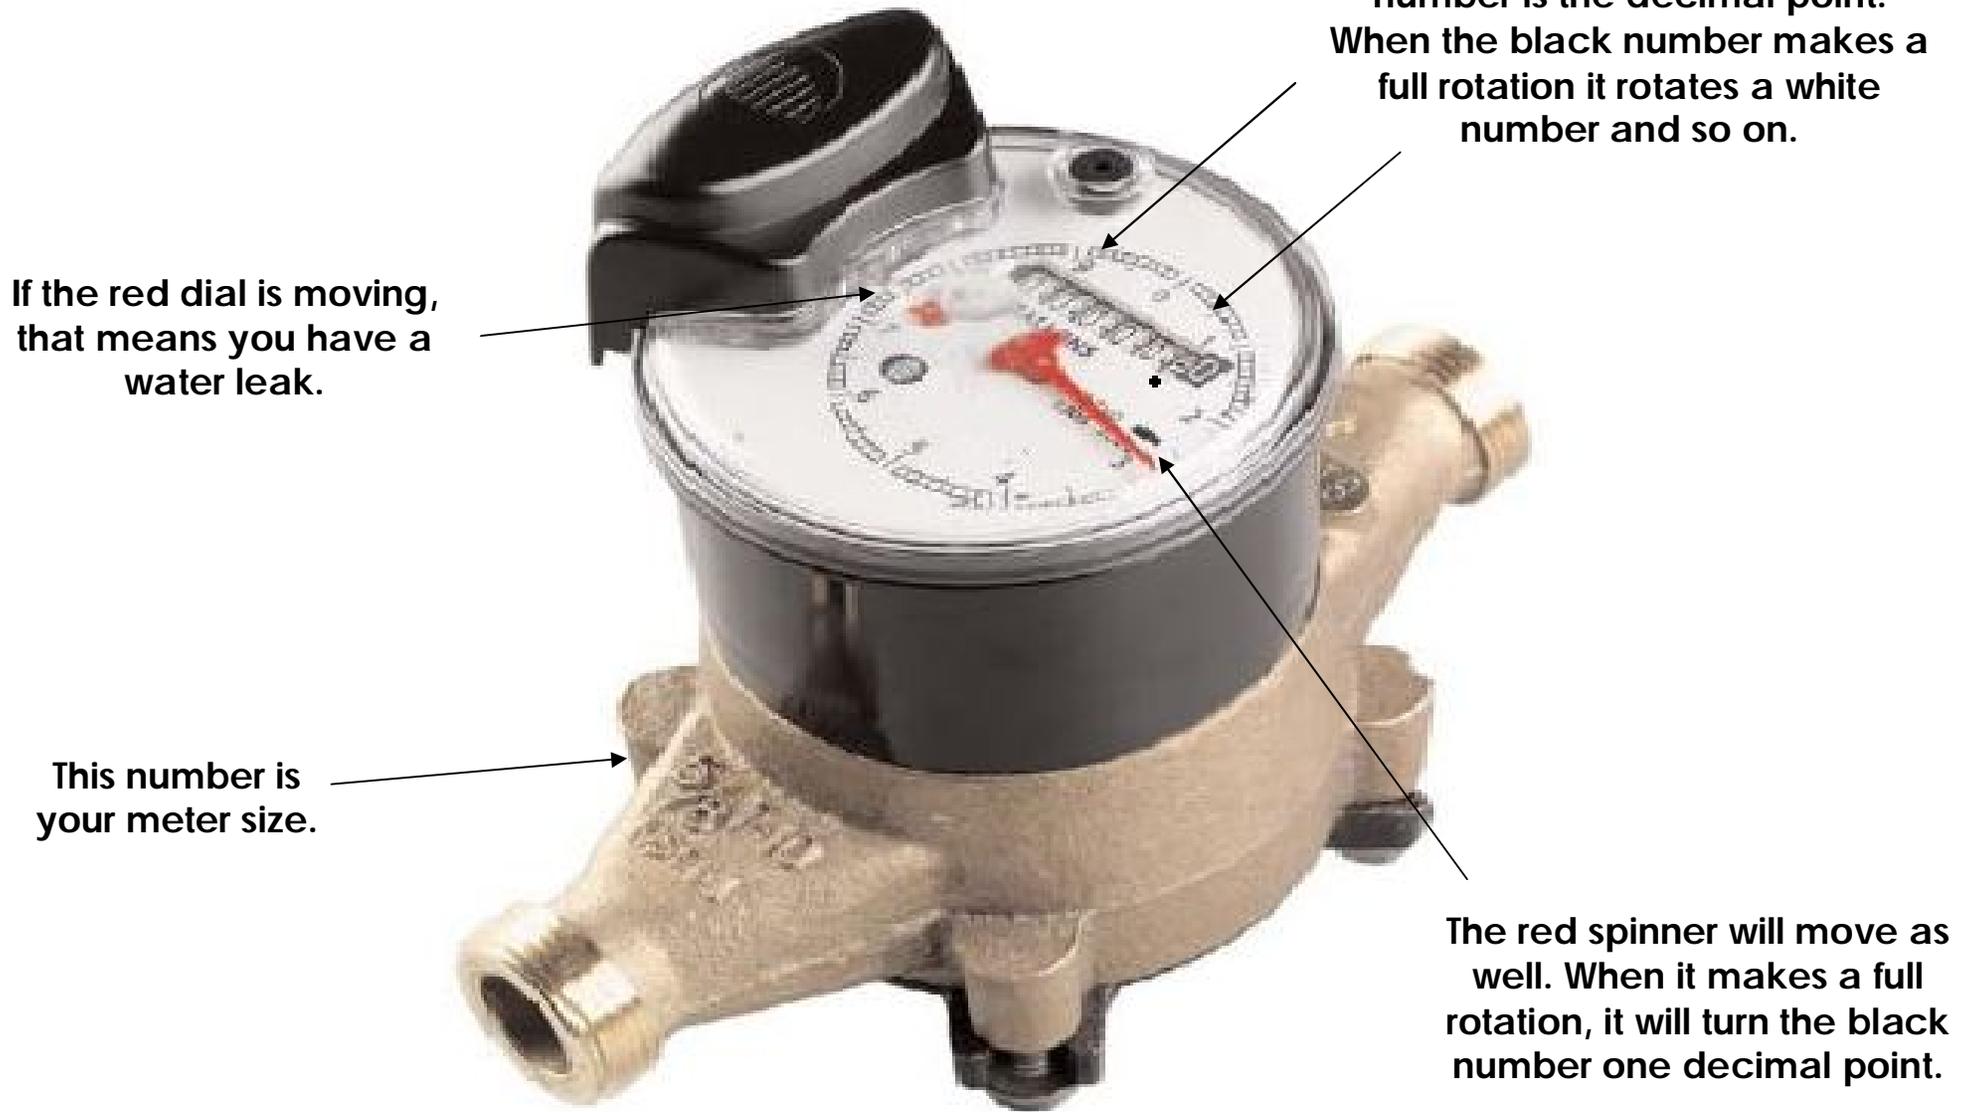

If the red dial is moving, that means you have a water leak.

The five white numbers are your read on this meter. The one black number is the decimal point. When the black number makes a full rotation it rotates a white number and so on.

This number is your meter size.

The red spinner will move as well. When it makes a full rotation, it will turn the black number one decimal point.